

# ROOF GLUE EPDM UPSTAND

Contact adhesive for bonding EPDM membrane to upstands



PRODUCT DATA SHEET

## Product description



A sprayable contact adhesive for bonding FlexiFoil EPDM vertically to roof upstands and horizontally to the roof surface (at least 15 cm from the upstand). The contact adhesive should be applied to the entire upstand and the first 15 cm of the roof surface as well as to the EPDM membrane as protection against the wind. This contact adhesive can be used both horizontally and vertically. It can be applied quickly and easily thanks to the handy spray can. This adhesive is not suitable for bonding seams or accessories.

## Application

For use on bitumen roofing rolls, wood, concrete or PIR insulation panels with glass fleece.

## Advantages

- Applied to two sides
- Easy to use
- Adheres to all substrates

## How much product do I need?

About 750 ml  $\pm$  2 m<sup>2</sup>

## Handy tips?

- Shake the spray can well and make sure the nozzle is clean to obtain a uniform spray pattern.
- Coat the horizontal surfaces with a fuller spray can and the upstands with an emptier spray can.
- The drying time of the glue depends on the temperature, amount of wind and humidity. At high temperatures, the EPDM membrane needs to be folded back more quickly.
- Adhesion increases gradually and reaches its maximum strength after 48 hours.
- This contact adhesive cannot be combined with FlexiFoil Details & Seams.

Material	Colour	Contents	Coverage	Drying time	Coats	Overpaintable
Contact adhesive	White	750 ml	750 ml/ 2m <sup>2</sup>	About 48 hours	1	n/a

# ROOF GLUE EPDM UPSTAND


Contact adhesive for bonding EPDM membrane to upstands



INSTRUCTIONS



## What do I need?

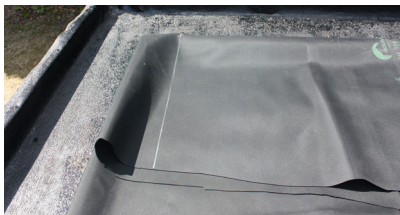

## How do I prepare the surface?

- Remove all dust and grease from the substrate.



## How do I use the product?

- Fold the FlexiFoil EPDM membrane back 15 cm.
- Spray the contact adhesive onto the first 15 cm of the roof surface, the upstands and the FlexiFoil EPDM membrane. Do not apply more glue than you can work with in 5-15 minutes.
- Wait until the glue is dry to the touch. Carefully fold the FlexiFoil EPDM membrane back into place and press down firmly. Ensure that there are no creases or air bubbles. Always work from the middle towards the sides. Use an EPDM roller and apply good pressure. This contact adhesive is applied on two sides and requires 0.35 litre/m<sup>2</sup>.
- Finish the roof edges with Aquaplan aluminium profiles.



## Would you like more information?

We are ready to answer all your questions.

Feel free to contact us:

Belgium: 03 248 30 00 or [info@aquaplan.com](mailto:info@aquaplan.com)

The Netherlands: 0162 42 29 00 or [verkoop-dhz@martensgroep.eu](mailto:verkoop-dhz@martensgroep.eu)

Website: [www.aquaplan.com](http://www.aquaplan.com)



Usage	Drying time	Cleaning	Protection
750 ml ± 2m <sup>2</sup>	5-10 min		